LEH-S301-WUS

Levoit Superior Nook Evaporative Humidifier



User Manual

Table of Contents

Package Contents	2
Specifications	2
Safety Information	3
Getting to Know Your Humidifier	5
Controls & Display	7
Getting Started	9
Using Your Humidifier	10
Care & Maintenance	12
Troubleshooting	16
Limited Warranty Information	19
Customer Support	21

Package Contents

1 × Evaporative Humidifier
1 × Wick Filter (Pre-Installed)
1 × Power Adapter
1 × User Manual

Specifications

Model	LEH-S301-WUS
Power Supply	12V ⎓ 1A
Rated Power	12W
Water Tank Capacity	0.8 gal / 3 L
Max Mist Output	300 ml/h
Max Runtime	30 hours on low fan speed **Note:** *The humidifier may run for a longer or shorter time depending on the environmental temperature and humidity.*
Noise Level*	18–39dB **Tested by independent lab at the lowest fan speed*
Dimensions	8.8 × 8.8 × 11.3 in / 22.4 × 22.4 × 28.8 cm
Weight	3.7 lb / 1.7 kg
Power Adapter	Input: 100–240V~ 50/60Hz, 0.4A Max Output: 12V ⎓ 1A
Operating Conditions	Temperature: 50°–95°F / 10°–35°C

READ AND SAVE THESE INSTRUCTIONS

Safety Information

To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines.

GENERAL SAFETY

- **Only** use your humidifier as described in this manual.
- **Do not** use your humidifier outdoors.
- Keep your humidifier away from water, and wet or damp areas. **Never** place in water or liquid.
- **Do not** use in excessively humid areas.
- Keep your humidifier away from heat sources.
- **Do not** use where combustible gases, vapors, metallic dust, aerosol (spray) products, or fumes from industrial oil are present.
- Keep 5 ft / 1.5 m away from where oxygen is being administered.
- Children should be supervised to ensure that they **do not** play with the humidifier.
- **Do not** allow children to play with the plastic packaging.
- **Do not** place anything into any opening on the humidifier.
- Children should be supervised to ensure they **do not** insert fingers or objects into the vent openings.
- **Do not** sit or place heavy objects on the humidifier.
- **Do not** add essential oils, supplemental water treatment liquids, or water filters into the water tank. This will damage the humidifier and cause leaks.
- **Always** unplug your humidifier before servicing (such as changing the filter).
- **Do not** use your humidifier if it is damaged or not working correctly, or if the cord or plug is damaged. **Do not** try to repair it yourself. Contact **Customer Support** (see page 21).
- **WARNING:** To reduce the risk of fire or electric shock, **do not** use this humidifier with any solid-state speed controls (such as a dimmer switch).
- Children should not clean or perform maintenance on the humidifier without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **WARNING:** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
- **WARNING:** Avoid dropping or impacting the fan, as this may damage the motor and cause

abnormal noise.
- **Not for commercial use. Household use only.**
- **Note:** ***Only*** *add water when the humidifier is off.*
- The humidifier shall not be modified by users, such as by adding supplemental filters to fans not intended to be used for air cleaning purposes.
- If you need an electronic version manual, kindly reach out to **Customer Support** (see page 21).


POWER ADAPTER & CORD

- Keep the humidifier near the outlet it is plugged into.
- If the plug does not fit, reverse the plug. If it still does not fit, **do not** use the plug in that outlet. **Do not** bypass this safety feature.
- **Never** place the adapter near any heat source.
- **Do not** handle the power adapter or plug with wet hands. Keep the plug and power adapter away from liquids.
- **Do not** cover the cord with a rug, carpet, or other covering. **Do not** place the cord under furniture or appliances.
- Keep the cord out of areas where people walk often. Place the cord where it will not be tripped over.
- This humidifier is **only** to be used with the power supply adapter provided with the humidifier.
- If the power adapter is damaged, it must be replaced by Vesync (US) Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (see page 21).
- This humidifier's power adapter uses standard North American **120V, 60Hz** outlets. If using outside the US or Canada, check for compatibility.


SAVE THESE INSTRUCTIONS

Getting to Know Your Humidifier

A. Display
B. Control Panel
C. Air Outlet
D. Wick Filter Frame
E. Wick Filter
F. Air Inlet
G. Water Tank
H. MAX Water Level Line
I. Window Insert
J. Water Level Window
K. Water Blocking Cover
L. Power Adapter Input
M. Humidity Sensor (On the Back)
N. Fan
O. Fan Stand
P. Power Adapter

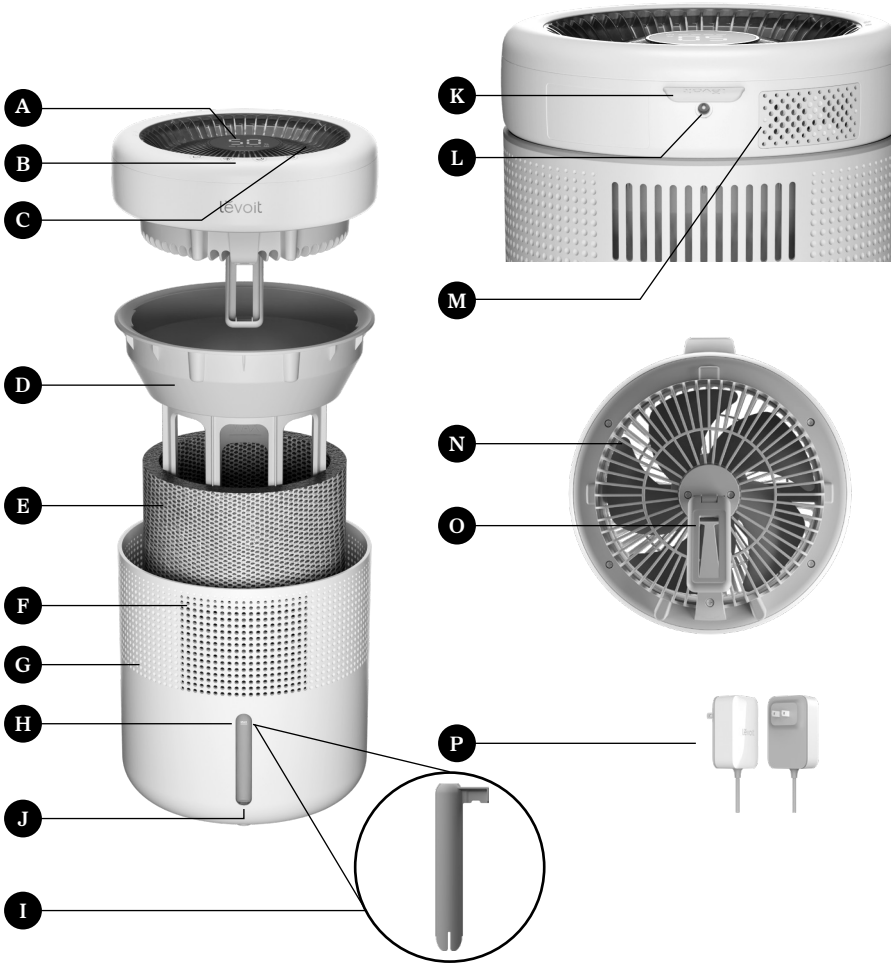


CONTROL PANEL

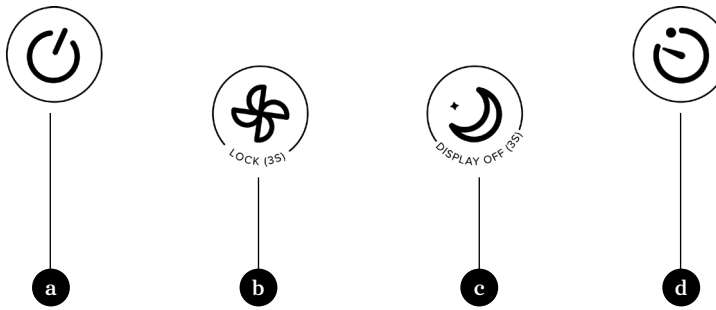

a. On/Off Button
b. Fan Speed/Display Lock Button
c. Sleep Mode/Display Off Button
d. Timer Button

DISPLAY

e. Sleep Mode Indicator
f. Lock Indicator
g. Fan Speed Indicators
h. Auto Mode Indicator
i. Timer Indicator
j. Humidity Percentage

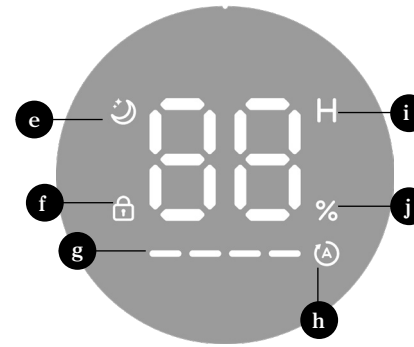

FAN SPEED INDICATORS



Controls & Display



On/Off Button

- Tap to turn the humidifier on/off.
- Press and hold for 15 seconds to reset the humidifier.



Fan Speed/Display Lock Button

- Tap repeatedly to cycle through fan speed settings: 1, 2, 3, 4, and Auto.
- Press and hold for 3 seconds to turn the Display Lock on/off.



Sleep Mode/Display Off Button

- Tap to turn Sleep Mode on (see page 11).
- Press and hold for 3 seconds to turn the display lights off. Tap any button to turn the display back on.
- Tap  to exit Sleep Mode.



Timer Button

- Tap to set a timer for 1–12 hours.
- Press and hold for 2 seconds to begin cycling through the timer options in 1-hour increments.
- After a timer is set, the display will flash 3 times, then show a countdown until the timer is finished.
- To turn a timer off before it is finished, tap ⏲ until the display shows “0” or tap ⏲ icon to turn the humidifier off.

INDICATORS



Auto Mode Indicator

Turns on when the humidifier is in Auto Mode. Default target humidity level is 50%.



Display Lock Indicator

- Turns on when the humidifier is locked.
- Flashes 3 times when any other button is tapped to indicate the Display Lock is on.



Humidity Percentage

Displays the current humidity.



Hour Indicator

Turns on when a timer is set.

Getting Started

1. Remove all parts from the packaging.
2. Rinse all parts, except the humidifier top, then reassemble (see **Cleaning**, page 12).
3. Optionally, if you want to use the fan alone, open the fan's stand to its maximum angle.
4. Choose a hard, flat location for the humidifier at least 12 in / 30 cm away from any walls. The surface must be water-resistant. *[Figure 1.1]*
5. If using the fan without the humidifier, place on a desk, nightstand, or dresser. *[Figure 1.2]*

Note: *Placing the humidifier away from walls ensures that the humidity sensor and air inlets function properly.*

FILLING & REFILLING

1. Turn the humidifier off.
2. Pour water through the grille opening to prevent splashing. *[Figure 1.3]*
3. Use the water level window to see how much water is in the tank. **Do not** fill past the tank's "MAX" water line. *[Figure 1.4]*

Note:

- ***Pour out any remaining water in the tank before each refill.*** *Impurities in the water may accumulate and cause scale buildup inside the humidifier.*
- *If using the top-fill method,* ***only*** *add water after the humidifier has been turned off.*
- *The display area is waterproof and won't get damaged when filling the water tank.*
- ***Do not*** *pour water onto the control panel, as this may cause accidental activation.*

CAUTION:

- ***Do not*** *fill with hot water.*
- ***Do not*** *add essential oils into the humidifier.*
- ***Do not*** *use water treatment liquids or third-party water filters in this humidifier.*



Figure 1.1



Figure 1.2



Figure 1.3



Figure 1.4

Using Your Humidifier

1. Plug in the humidifier. The indicators on the display will light up for 1 second, then turn off.
2. Tap ⏻ to turn your humidifier on. The humidifier will start evaporating water.

Note: *This humidifier uses evaporative technology, so the water vapor is invisible.*

3. Tap FOCUS FAN repeatedly to cycle through fan speed settings: 1, 2, 3, 4, and Auto.
4. When your room has reached your preferred humidity level, turn the humidifier to a lower setting, or turn it off. A comfortable humidity level is between 40–60%.
5. Tap ⏻ to turn your humidifier off.

AUTO MODE

Auto Mode uses the humidifier's sensor to automatically adjust the fan speed to maintain a target humidity level. The default target humidity for Auto Mode is 50%.

1. Tap FOCUS FAN until the Auto Mode Indicator is lit up on the display. The display will show the current relative humidity.

Note: *The humidifier will automatically evaporate water for 15 seconds after being turned on, even if the room has reached the target humidity level.*

2. The humidifier will stop when your target humidity level is reached.
3. The humidifier will continue detecting the humidity level in the room. It will start and stop again according to the following table:

Target Humidity	Fan Speed
> 10% of current humidity	4
≤ 10% of current humidity	2 or 3
< Current humidity	Automatically stops

Note: ***Do not*** *use Auto Mode when using the desk fan alone. Auto Mode responds to current humidity and may cause the fan to automatically stop.*

SLEEP MODE

Sleep Mode changes the humidifier's fan speed setting to 1 and turns off the display, making it ideal for sleep.

1. Tap to turn Sleep Mode on.

Note: *Sleep Mode automatically turns off the display.*

2. When Sleep Mode is on, you can tap any button to wake up the display. If no other button is pressed after waking up the display, the display will turn off again after 6 seconds.
3. Once you wake up the display, tap to exit Sleep Mode.

USING YOUR DESK FAN

1. Plug in the fan. The indicators on the display will light up for 1 second, then turn off.
2. Tap to turn on the fan.
3. Tap to cycle through fan speed: 1, 2, 3, and 4.

Note:

- *It's recommended to use the fan speed 3 or 4 for stronger wind.*
- ***Do not** use Auto Mode when using the desk fan alone.*

MEMORY FUNCTION

The humidifier will remember your settings for fan speed, humidity level, Display Off, Sleep Mode, and Auto Mode when turned off or unplugged and will resume those settings when turned back on.

IMPORTANT TIPS

Your humidifier must have the correct level of water in the water tank to work properly. If there is too much water in the tank, the humidifier cannot evaporate water.

- **Do not** place the humidifier on an inclined surface.
- **Do not** add water to the humidifier while it is on.
- Avoid moving or shaking the humidifier.
- Before moving the humidifier, turn it off, unplug it, and remove the water tank and empty any excess water.
- **WARNING:** Avoid dropping or impacting the fan, as this may damage the motor and cause abnormal noise.

Care & Maintenance

Note:

- *All maintenance should be done on a water-resistant surface, such as a kitchen or bathroom floor.*
- *Change the water every 3 days to avoid bacteria growth.*
- *If not using the humidifier for 1 week or longer, **do not** leave water inside. Clean and dry the humidifier instead.*

CLEANING

You should clean your humidifier water tank every 3 days, and when you're ready to store it.

Note: *Never* *immerse the fan in water or liquid.*

1. Unplug the humidifier.
2. Remove the fan.
3. Remove the wick filter frame. *[Figure 2.1]*



Figure 2.1

4. Remove the wick filter from the wick filter frame.
5. Remove the water level gauge from the water tank.*[Figure 2.2]*
6. Pour out any water from the tank using the slotted opening in the tank. *[Figure 2.3]*

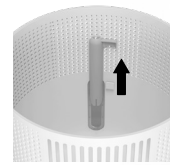


Figure 2.2



Figure 2.3

7. Wipe all parts with a soft, damp cloth or a cleaning brush and mild detergent.
8. Optionally, you can place the wick filter frame in the dishwasher.

Note: *Do not* *place the fan in the dishwasher.*

CLEANING

You should hand wash your humidifier parts every 3 days or when you're ready to store it. **Only** the wick filter frame and support frame are dishwasher-safe.

CAUTION: *Only* *wash the wick filter frame and support frame in the dishwasher no more than once a week **in the top rack using a normal or light cycle with mild detergent**, and make sure temperature settings are below 158°F / 70°C. **Do not** place on the bottom rack or near the heating element.*

DO NOT USE:

- X Detergents that contain bleach
- X Heat dry
- X Sanitize
- X Hi-temp
- X Steam
- X Heavy or any high-temperature cycle/option

9. Make sure all parts are completely dry before reassembling or storing.
10. Place the wick filter back onto the wick filter frame before reassembling or storing.
11. Place the wick filter frame back onto the water tank. *[Figure 2.4]*

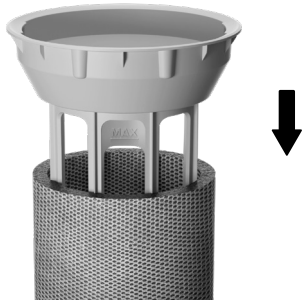


Figure 2.4

12. Place the fan on the water tank, aligning the Levoit logo with the "MAX" water level line. *[Figure 2.5]*

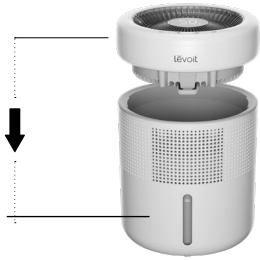


Figure 2.5

CLEANING THE WICK FILTER

The wick filter is washable and can last up to 2 years when taken care of. You should clean the wick filter every **2 weeks** and when you're ready to store it.

1. Turn off the humidifier and remove the fan.
2. Remove the wick filter frame, then remove the wick filter from the frame.
3. Gently wash the wick filter with laundry detergent or citric acid and thoroughly rinse. *[Figure 3.1]*



Figure 3.1

4. Optionally, you can wash the wick filter in a washing machine. *[Figure 3.2]*

CAUTION:

1. Use cold water only.
2. Select the Quick Wash cycle.
3. Use a mild laundry detergent.
4. Do not use heated drying or sanitizing cycles.



Figure 3.2

5. Reinstall the wick filter onto the wick filter frame.
6. Place the fan on the water tank, aligning the Levoit logo with the "MAX" water level line.

REPLACING THE WICK FILTER

1. Turn off the humidifier and remove the fan.
2. Remove the wick filter frame, then remove the wick filter from the frame.
3. Remove the plastic packaging from the new wick filter and install onto the wick filter frame.
4. Place the fan on the water tank, aligning the Levoit logo with the "MAX" water level line.

STORING


Follow the cleaning instructions and allow all parts to dry completely before storing. Store in a cool, dry location.

CLEANING THE DESK FAN


1. Turn off the fan and unplug.
2. Rinse the grille with water.




3. For thorough cleaning, use a screwdriver to remove the screw holding the grille to the fan.

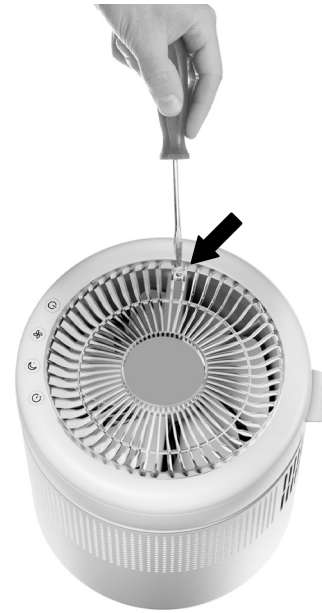

4. Rotate the grille counterclockwise to the 🔓 position and lift to remove.

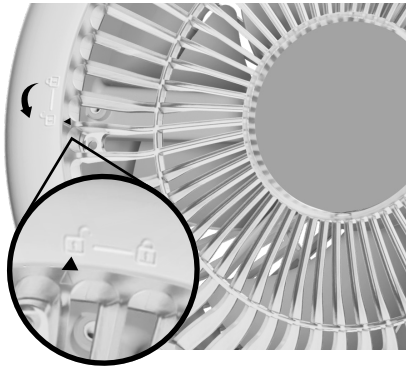


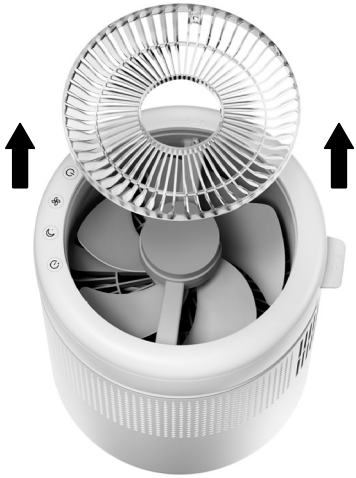


5. Use a vacuum, duster, or compressed air to clean the inside of the fan.

6. Wipe the parts down with a damp cloth, then immediately dry. If necessary, use a mild detergent to remove any dirt.

7. After cleaning, replace the grille and rotate clockwise to position. Secure the grille to the 🔒 with the screw.

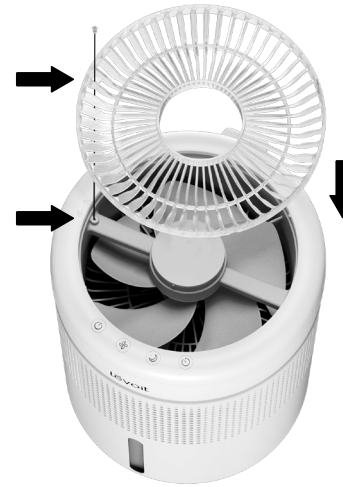

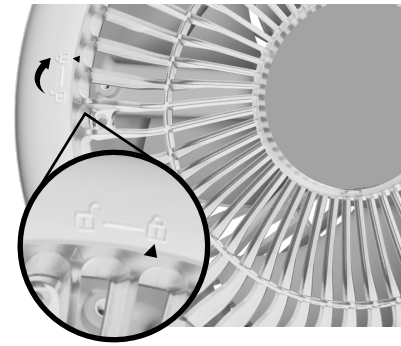

Note:

- ***Do not*** *allow water to enter the sensor or the power adapter input.*
- ***Do not*** *clean with abrasive chemicals or flammable cleaning agents.*

Troubleshooting

Problem	Possible Solution
Humidifier doesn't turn on, or turns off unexpectedly.	Plug the humidifier into a working outlet and turn it on.
Air doesn't seem to be humid.	Turn the fan speed to a higher setting.
	Fill the water tank.
	There may be too much water in the tank. Pour out some of the water from the tank.
	Clean the humidifier (see **Care & Maintenance**, page 12).
	Make sure the humidifier is on a level surface.
	Clean the wick filter (see **Cleaning the Wick Filter**, page 13) and rinse the water filter sponge.
Humidifier uses water too quickly.	The humidifier uses up water based on the environmental temperature and humidity. If your environment is cold and/or dry, the humidifier will run out of water faster.
Humidifier produces an unusual smell.	If the humidifier is new, unplug and rinse all parts, then place in a cool, dry place for 12 hours.
	Clean the humidifier (see **Care & Maintenance**, page 12).
Humidifier makes a loud or unusual noise.	Set fan speed to a lower setting.
	Empty the water tank then refill the water tank (see **Filling & Refilling**, page 9).
	The humidifier may be malfunctioning. Stop using the humidifier and contact **Customer Support** (see page 21).
Water visibly leaks from the humidifier.	Avoid running the humidifier in a room with over 60% relative humidity (unless required for plants or furniture).
	Wipe any excess water off the top and bottom of the tank.
	Do not shake the humidifier.
	Make sure to place the humidifier on a flat, level surface.
	Check the water tank for leaks. If there are leaks, contact **Customer Support** (see page 21).

Troubleshooting (cont.)

Problem	Possible Solution
The area around the humidifier is damp or wet from condensation.	Humidity may be too high. Turn down the fan speed, turn off the humidifier, or open a door or window to the room.
	Open a window to ensure proper airflow for the humidifier, or move the humidifier to a more well-ventilated room.
	Make sure the water tank is properly in place (see **Getting Started**, page 9).
	When replacing the water tank, wipe off excess water from the water tank.
Mold grows inside the humidifier.	Clean the water tank regularly (see **Care & Maintenance**, page 12).
Display shows an incorrect humidity percentage.	Moisture may have built up inside the humidity sensor. Turn off the humidifier and allow the sensor to air dry.
	If the humidifier is placed within 12 in / 30 cm of a wall or in a corner, the humidity sensor cannot provide a proper reading for the relative humidity in the room.
	The humidity sensor will give an improper reading if it is exposed to dust. Avoid using the humidifier in dusty rooms.
The humidity level isn't changing in my room.	Use a higher fan speed setting.
	Depending on your environment, the humidifier may take longer to humidify your air.

If your problem is not listed, please contact **Customer Support** (see page 21).

Federal Communication Commission Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

FCC SDOC Supplier's Declaration Of Conformity

Vesync (US) Corporation hereby declares that this equipment is in compliance with the FCC Part 15 Subpart B. The declaration of conformity may be consulted in the support section of our website, accessible from www.vesync.com/legal/compliance/fcc

Limited Warranty Information

Product Name	Superior Nook Evaporative Humidifier
Model	LEH-S301-WUS
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Date of Purchase	
Order ID	

Levoit Limited Product Warranty

Register your products at https://warranty.levoit.com/warranty to stay up to date with important product information such as product updates, limited warranties, usage and maintenance recommendations, and notifications concerning safety warnings or product recalls. Registration is not required to claim your limited warranty.

Two (2) Year Limited Consumer Product Warranty

Vesync (US) Corporation ("Vesync") warrants that the product shall be free from defects in material and workmanship for a period of 2 years from the date of original purchase ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g., in the intended environment and under normal circumstances).

California Residents Only

The Warranty Period begins on the original date of delivery or pick-up.

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, Vesync will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online Levoit store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Vesync's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Vesync's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Vesync or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support Team via support.levoit.com.

What's Not Covered?

- Normal wear and tear, including parts that might wear out over time (e.g., batteries, filters, cleaning brush, essential oil pads, etc.).
- If the proof-of-purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.

- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Vesync.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. DO NOT dispose of your product before contacting us.
4. Contact our Customer Support Team via support.levoit.com.
5. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Sole and Exclusive Remedy

THE FOREGOING LIMITED WARRANTY CONSTITUTES VESYNC (US) CORPORATION EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF VESYNC (US) CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

Disclaimer of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, VESYNC (US) CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM VESYNC (US) CORPORATION "AS IS" AND VESYNC (US) CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL VESYNC (US) CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM VESYNC (US) CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF VESYNC (US) CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED

THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, VESYNC (US) CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

Other Rights You May Have

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

CHANGES TO THIS POLICY

We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

VESYNC (US) CORPORATION

1775 Flight Way, Suite 150
Tustin, CA 92782
USA

Customer Support

If you have any questions or concerns about your new product, please contact our Customer Support Team.

Vesync (US) Corporation
1775 Flight Way, Suite 150
Tustin, CA 92782
USA

Website: support.levoit.com
Phone: 1-888-726-8520

SUPPORT HOURS

Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Please have your order invoice PDF or screenshot(s) ready before contacting Customer Support.*

Notes

Notes


lĕvoit
by VeSync